


Splicing

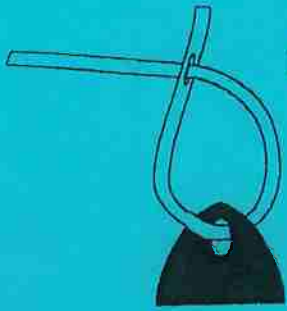

1

Feed line through eyelet in can, then through line to form a circle.



3

Push through line above step 1 and tighten.



2

Pull through about 6" and push through both about 1/2" below step 1.



4

Push into center of line above step 3 and up, encasing end of line completely.